
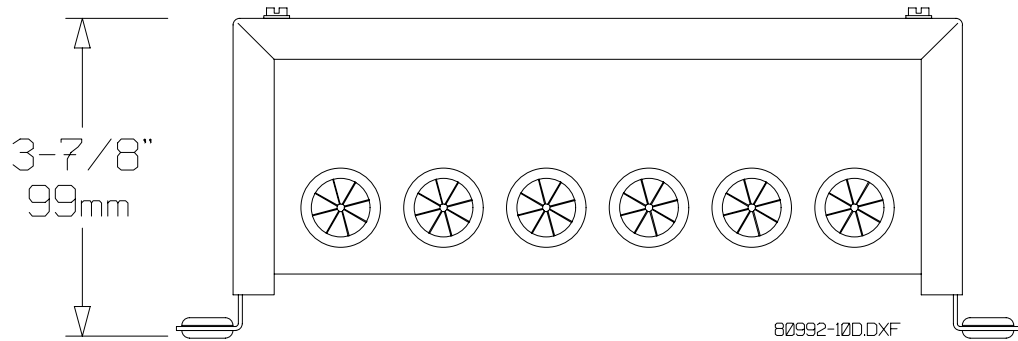


Relay Boxes FR, FRS, HR, HRS, MFR

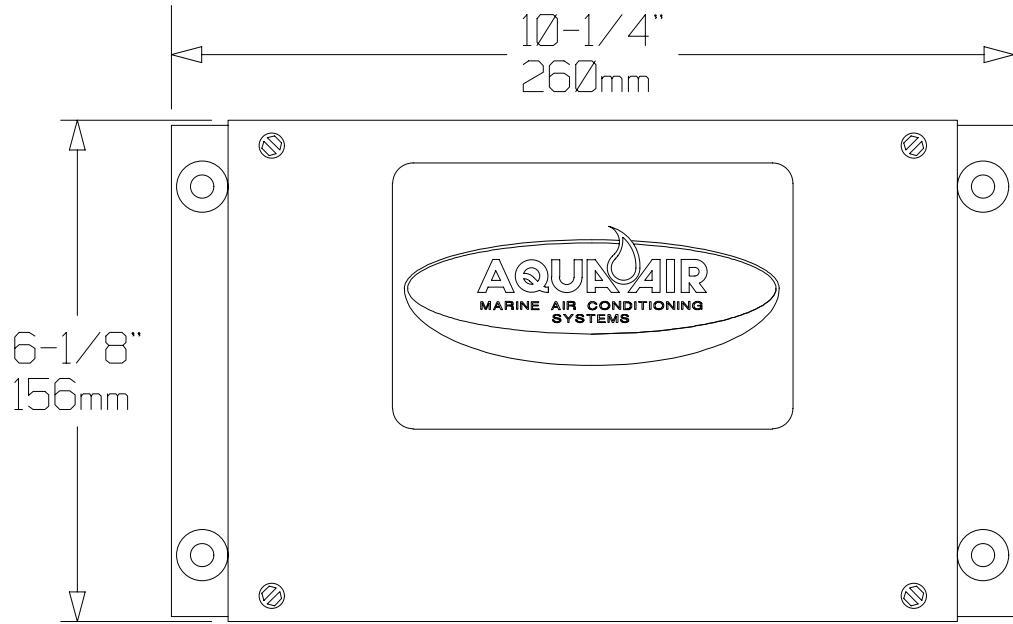


Relay Series	Master Unit	Slave Unit	Heater Use		Hot Water Heating
			1 Ph	3 Ph	
FR-100 (C)	X				X
FRS-100 (C)		X			X
HR-100 (C)	X		X		
HR-103 (C)	X			X	
HRS-100 (C)		X	X		
HRS-103 (C)		X		X	
MFR-100 (C)	X		X		
MFR-103 (C)	X			X	


All relays have a 100-115/1/50-60 control circuit unless a 'C' appears at the end of the model number designating a 200-230/1/50-60 control circuit

i:\wordpfct\80992-10.wpd


AQUA-AIR MANUFACTURING, division of the James D. Nall Co., Inc.
1050 East 9th Street, Hialeah, Florida 33010 U.S.A.
Ph. 305-884-8363 Fax 305-883-8549 Email sales@aquair.com

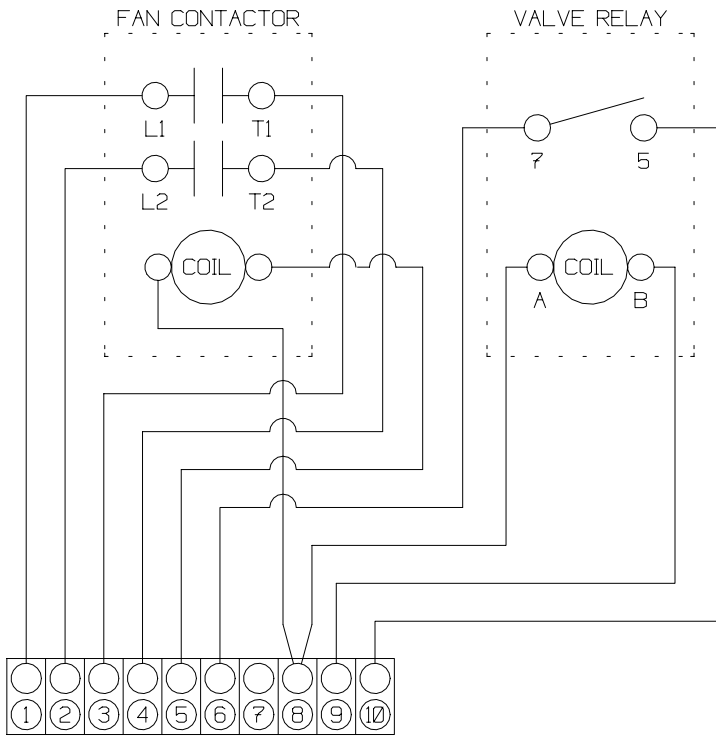


FR-100

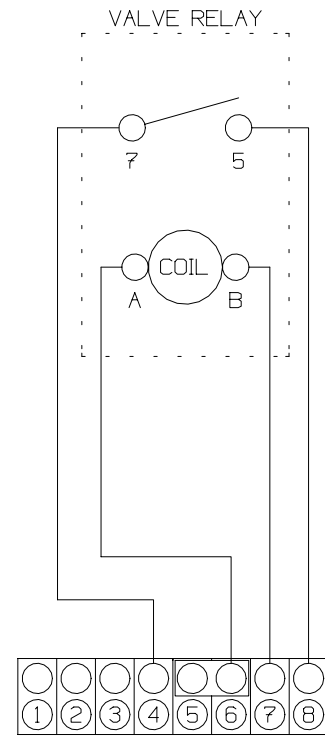


FRS-100

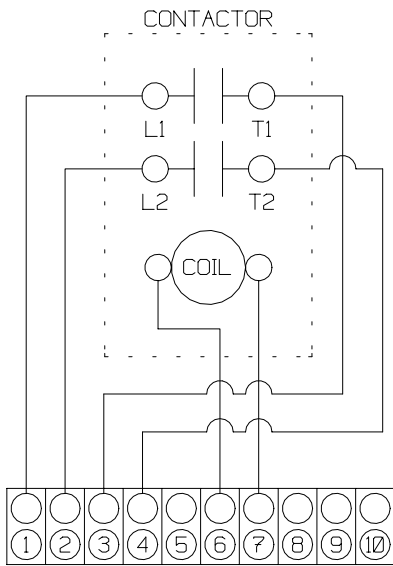


HR-100

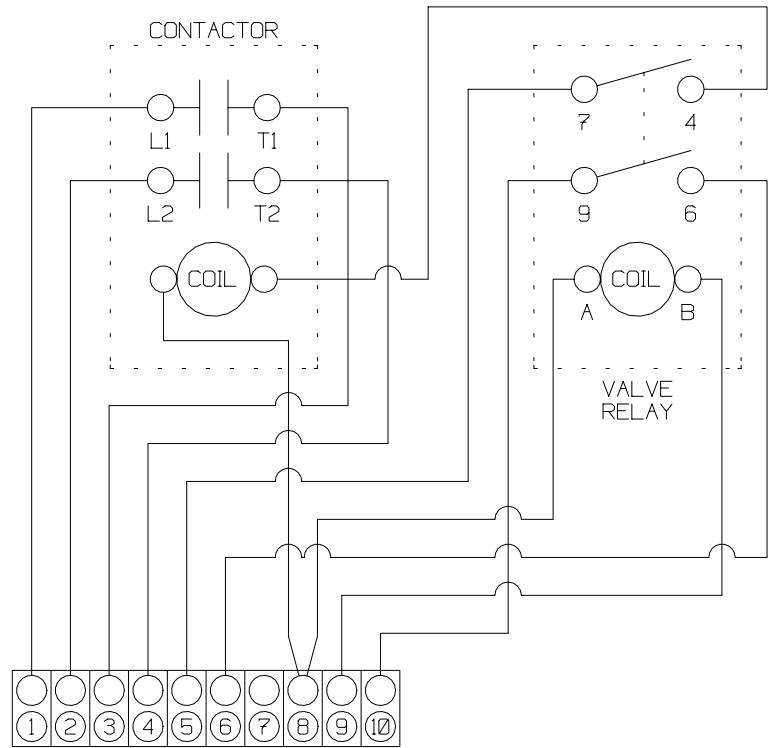


HRS-100

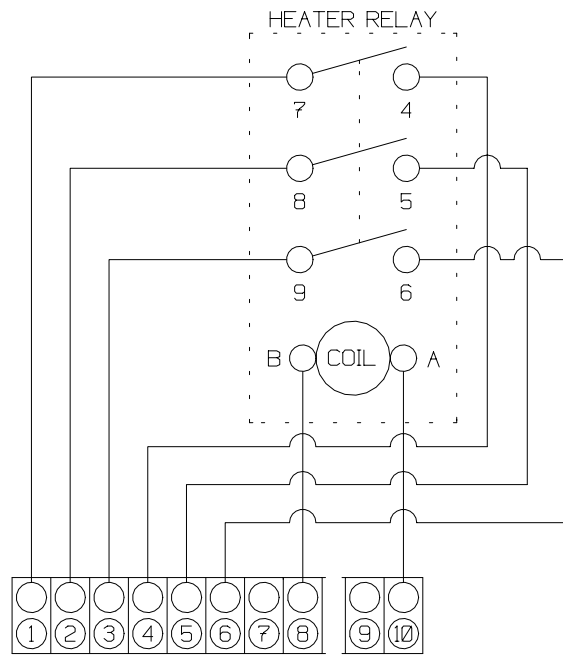


HR-103

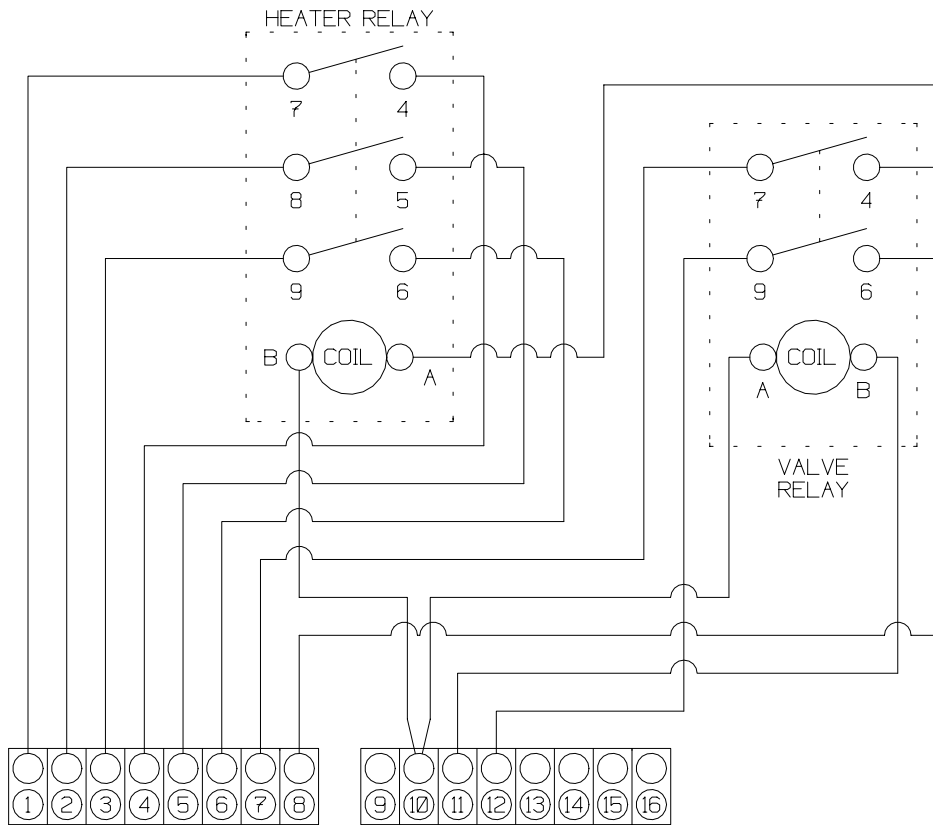

HRS-103

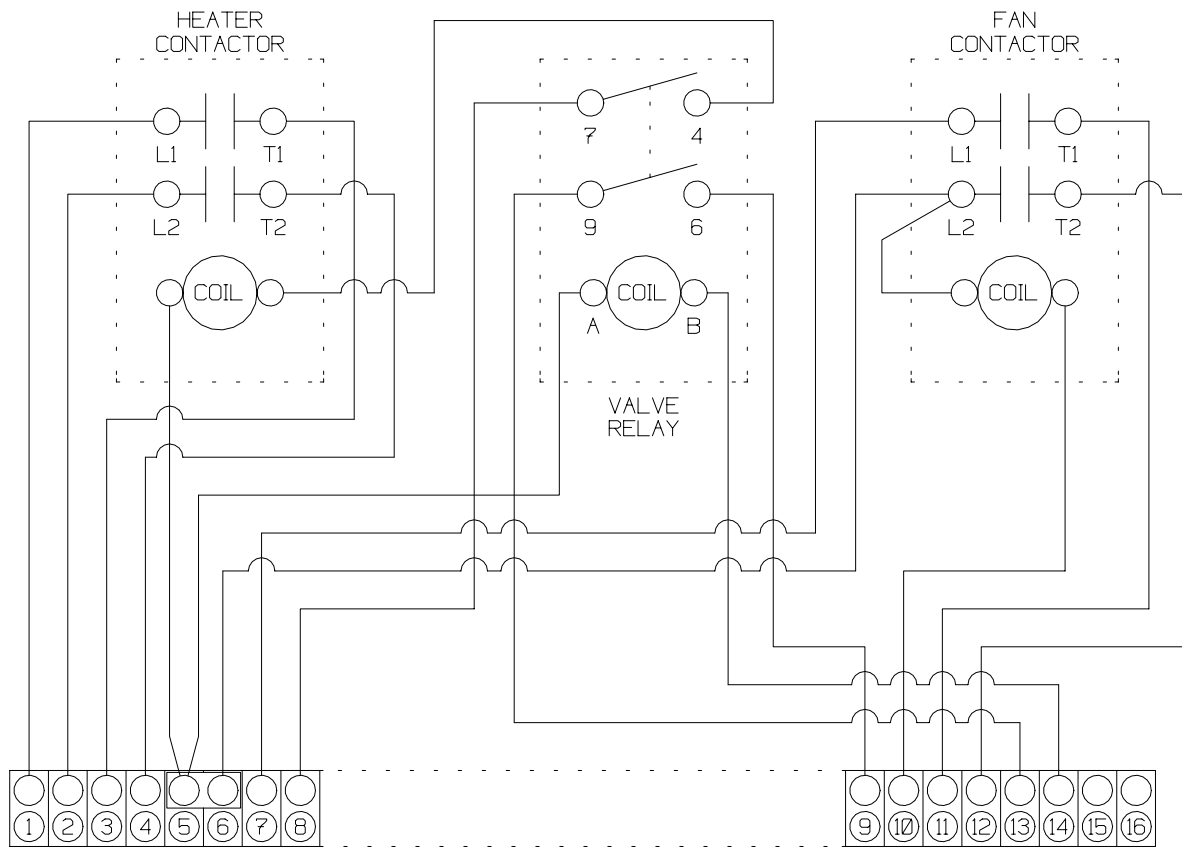

MFR-100

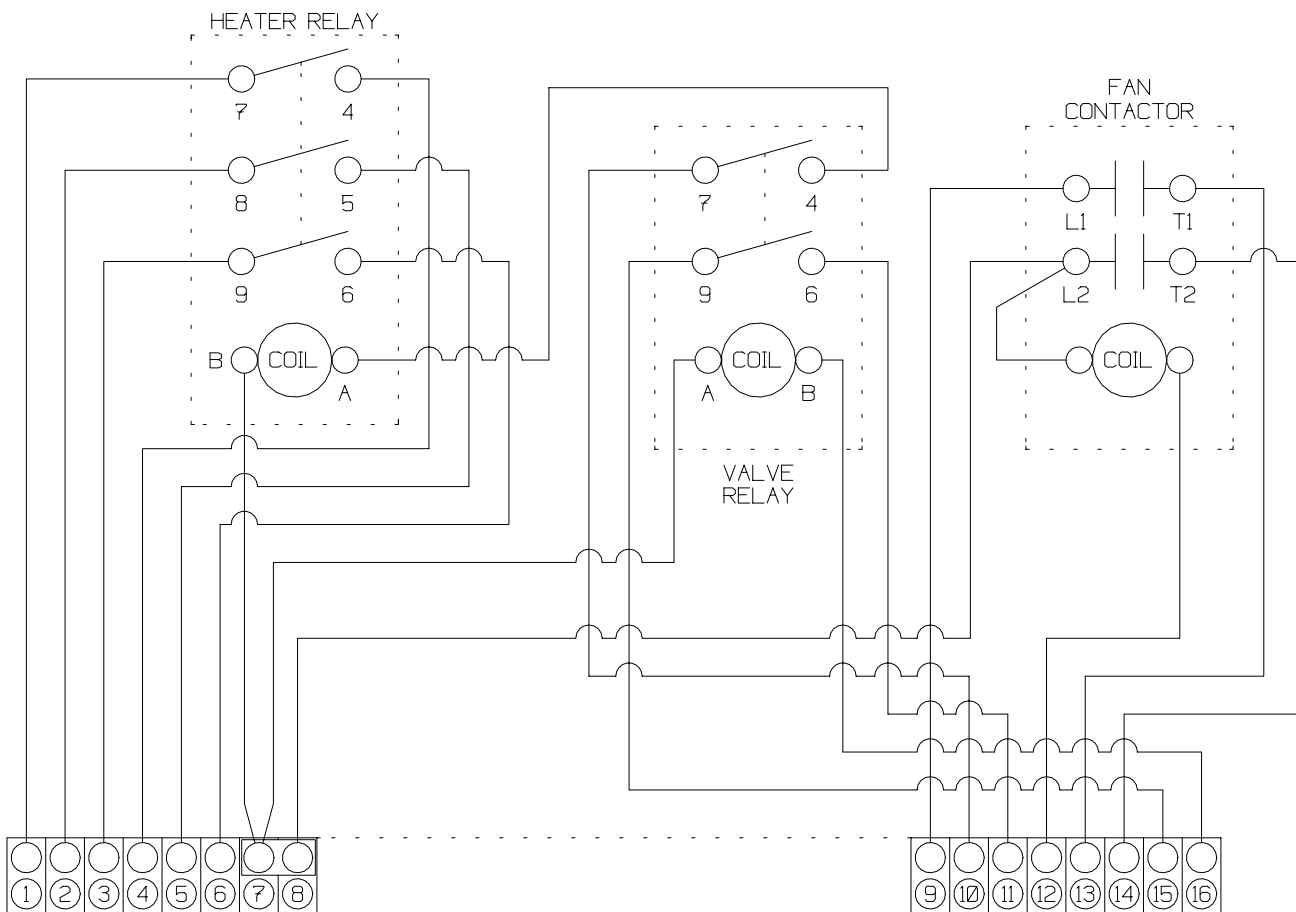

MFR-103